



Check this o-ring. If in good condition, grease it. If not in good condition, replace it and grease it.