

Clean and grease PC-7200-100 or PC-7200-200 Piston-Cylinder Modules

Also refer to PG7000 Manual

100kPa MODULE SHOWN,
LUBRICATE 200kPa MODULE AT SAME LOCATIONS

Clean any oil from bottom of piston cap, top of nut and spring carrier, inside diameter of spring carrier, and bottom of spring carrier.

Ignore this part as it's the spring carrier that is not recommended to take out. There are lots of springs in there and they are not easy to put together again.

Part Number: 2644003
Description: Buna 2-117

Part Number: 3134158
Description: Buna 2-016 (Qty 2)

NUT

SPRING CARRIER

SPACER CLIP

PISTON

UPPER SLEEVE

O-RING
O-RING

CYLINDER

O-RING

LOWER SLEEVE

Part Number: 2721018
Description: Buna 2-020

O-RING

