

9133 Fan Repair

9133 Top Panel Removal



1 Remove the 6 screws holding the top panel in place. 2 are underneath the front, 2 are on top, and 2 are in the back.

2 Remove the top panel by lifting up on the back part of the top panel.




Back




Bottom Front

9133 Fan Location

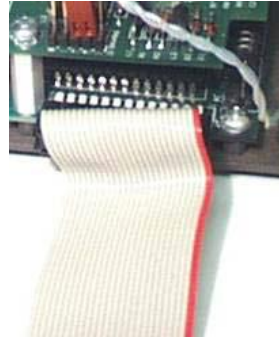


- 1 With the top panel removed, disconnect the display cable.

Note the orientation of the cable being removed.

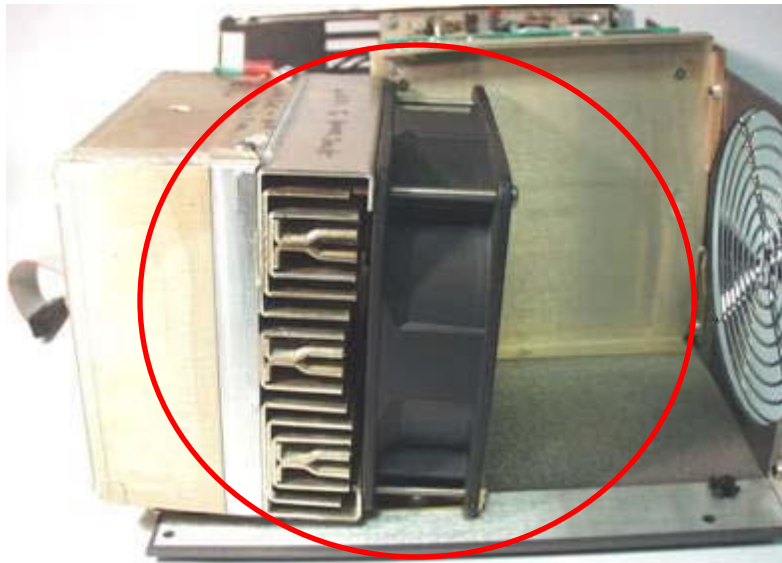


- 2 The fan is located behind the IR target and is attached to the heat sink.

9133 IR Target Removal

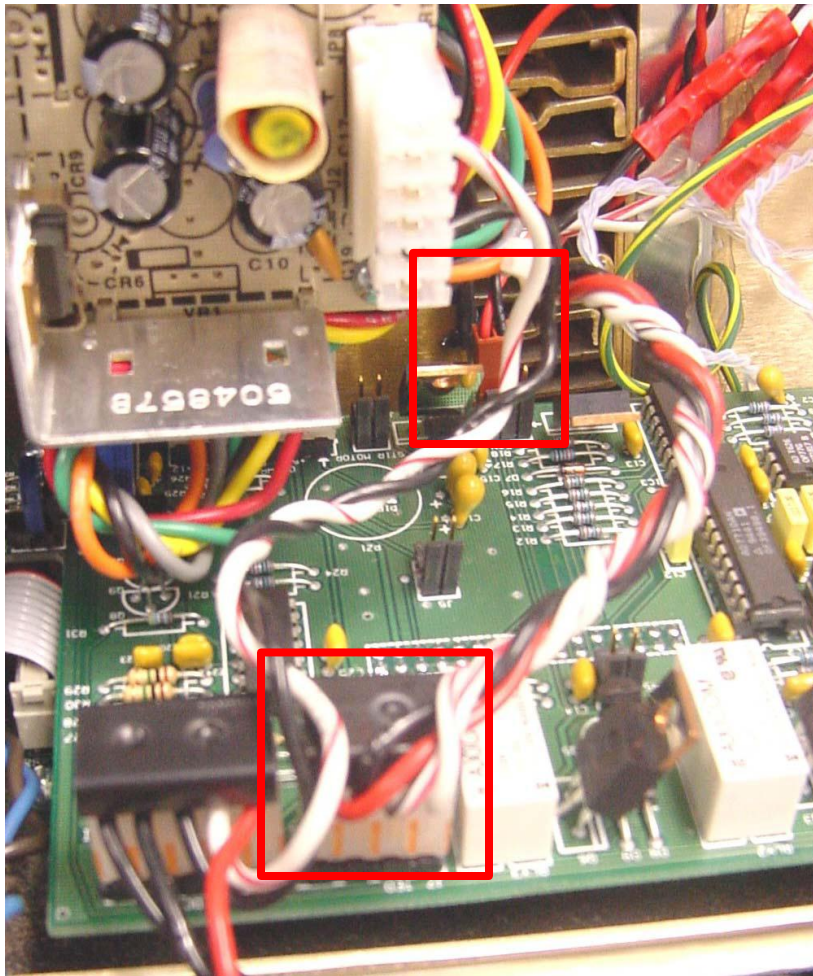


- 1 Remove the three IR target cables from the controller board.

One is the fan cable, one is the TE mod cable, and the third is the sensor cable.

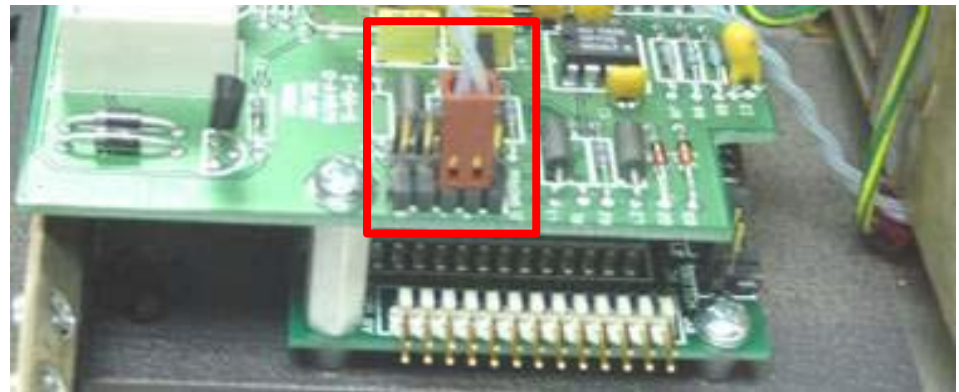


9133 IR Target Removal

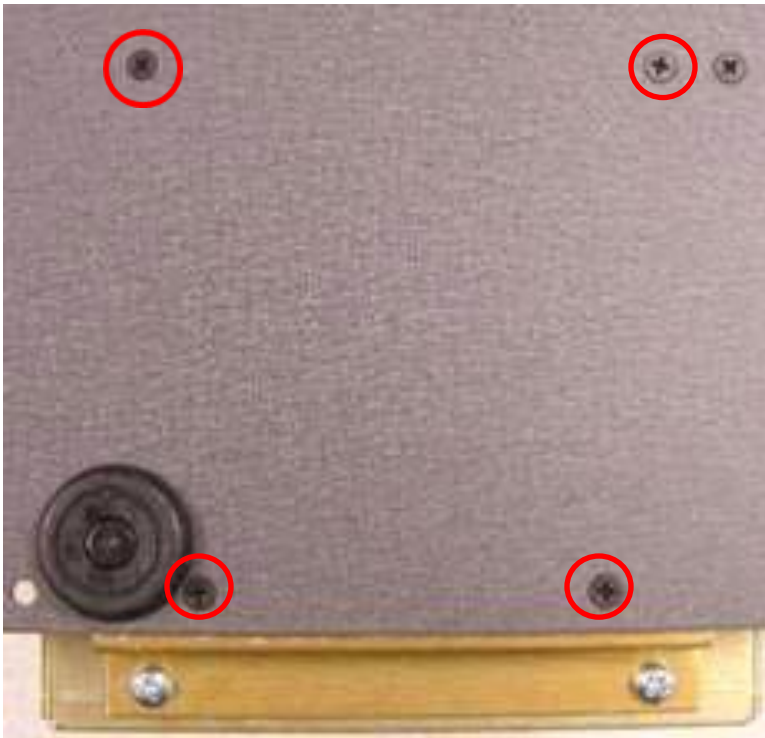


- 3 Turn the 9133 over and remove the 4 screws holding the block in place.

The block should now be free to be removed and worked on.

9133 Fan Removal

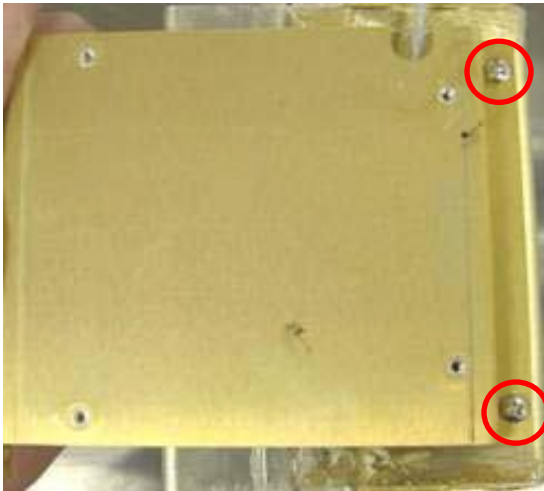

- 1 Remove the two screws from the bottom of the IR target assembly.

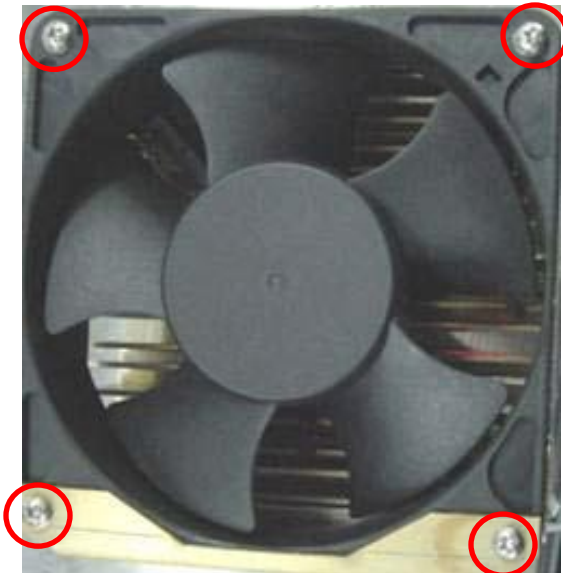

- 2 Remove the four screws from the back of the IR target assembly that is holding the fan in place. Replace with a new fan.