

molbox1 and/or molbox1+ terminals

How to check the ribbon cable from the back panel board to the driver board. Can cause PRError, acalerr or “no bloc” errors.




1. Remove the 10 screws that hold the cover on (molbox1+ with metal enclosure).
If plastic enclosure, flip up the 6 top panel screw covers and loosen the screws fully.
Remove the enclosure

2. Might be washers used as spacers in here.

3. Two screws on left side also.

4. Lift cover up when all 10 screws are removed

5. Check the ribbon cable from the back panel board to the driver board
6. If your molbox has the MFC option then the MFC board will be above the driver board and it also has a ribbon cable from it to the back panel board. If so, you will probably have to disconnect the MFC board ribbon cable

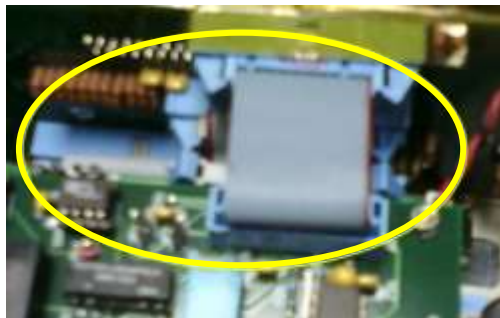

molbox1 and/or molbox1+ terminals

How to check the ribbon cable from the back panel board to the driver board. Can cause PRError, acalerr or “no bloc” errors.

